
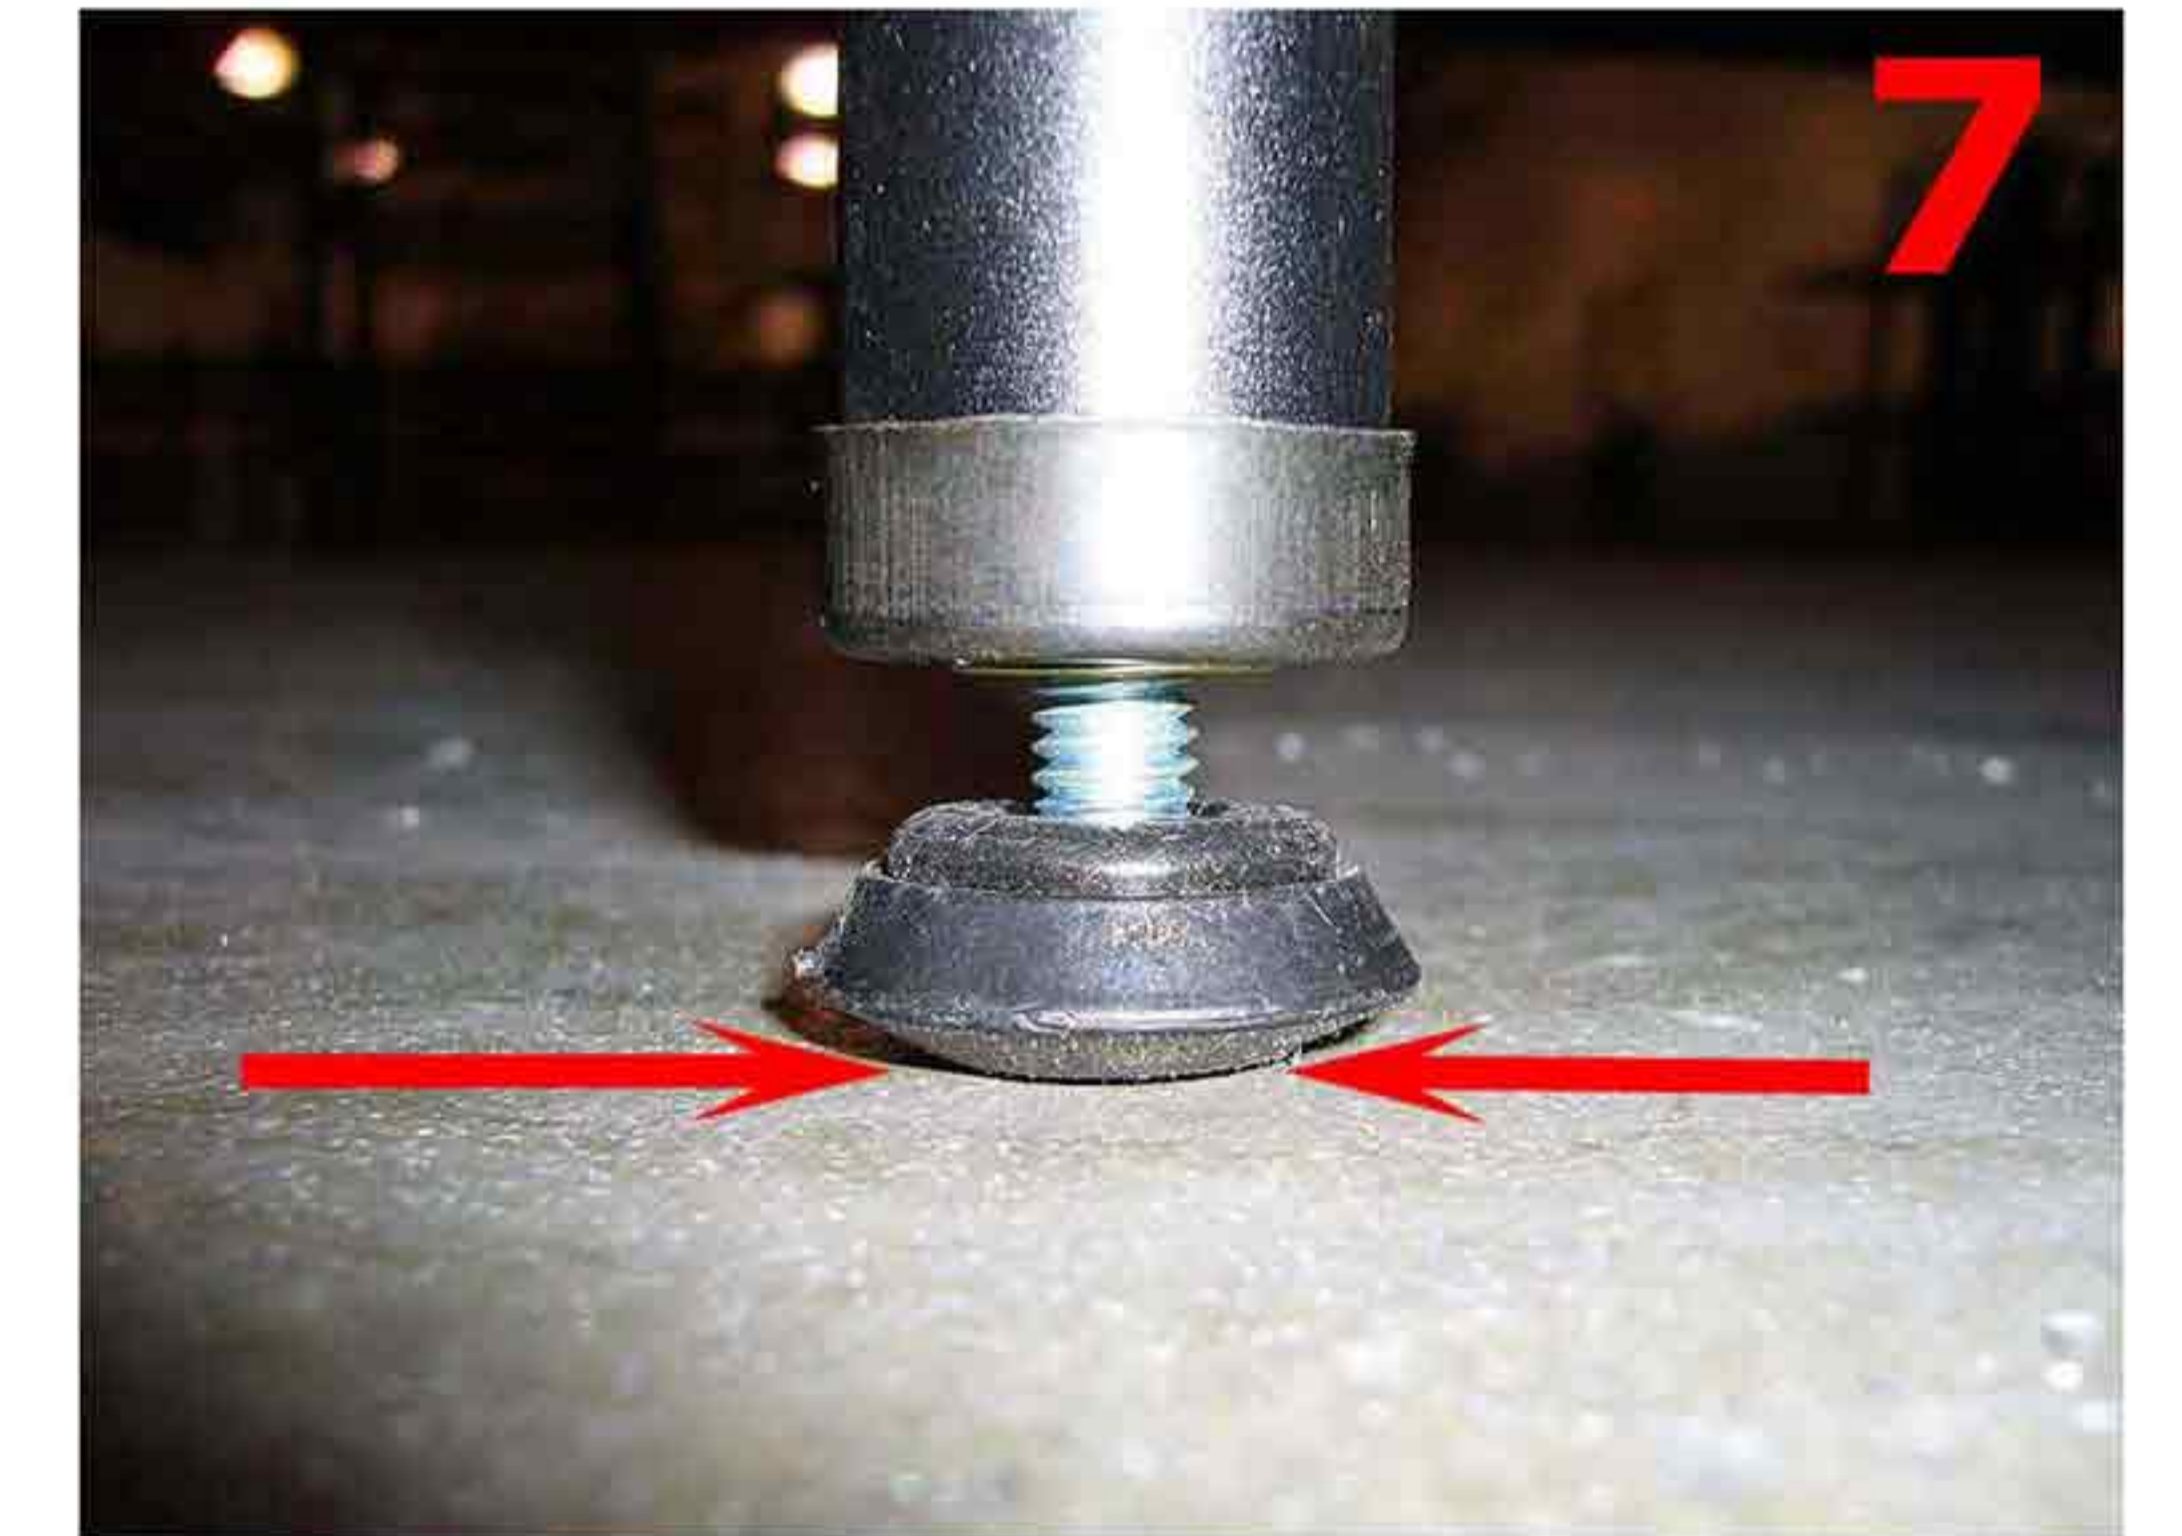
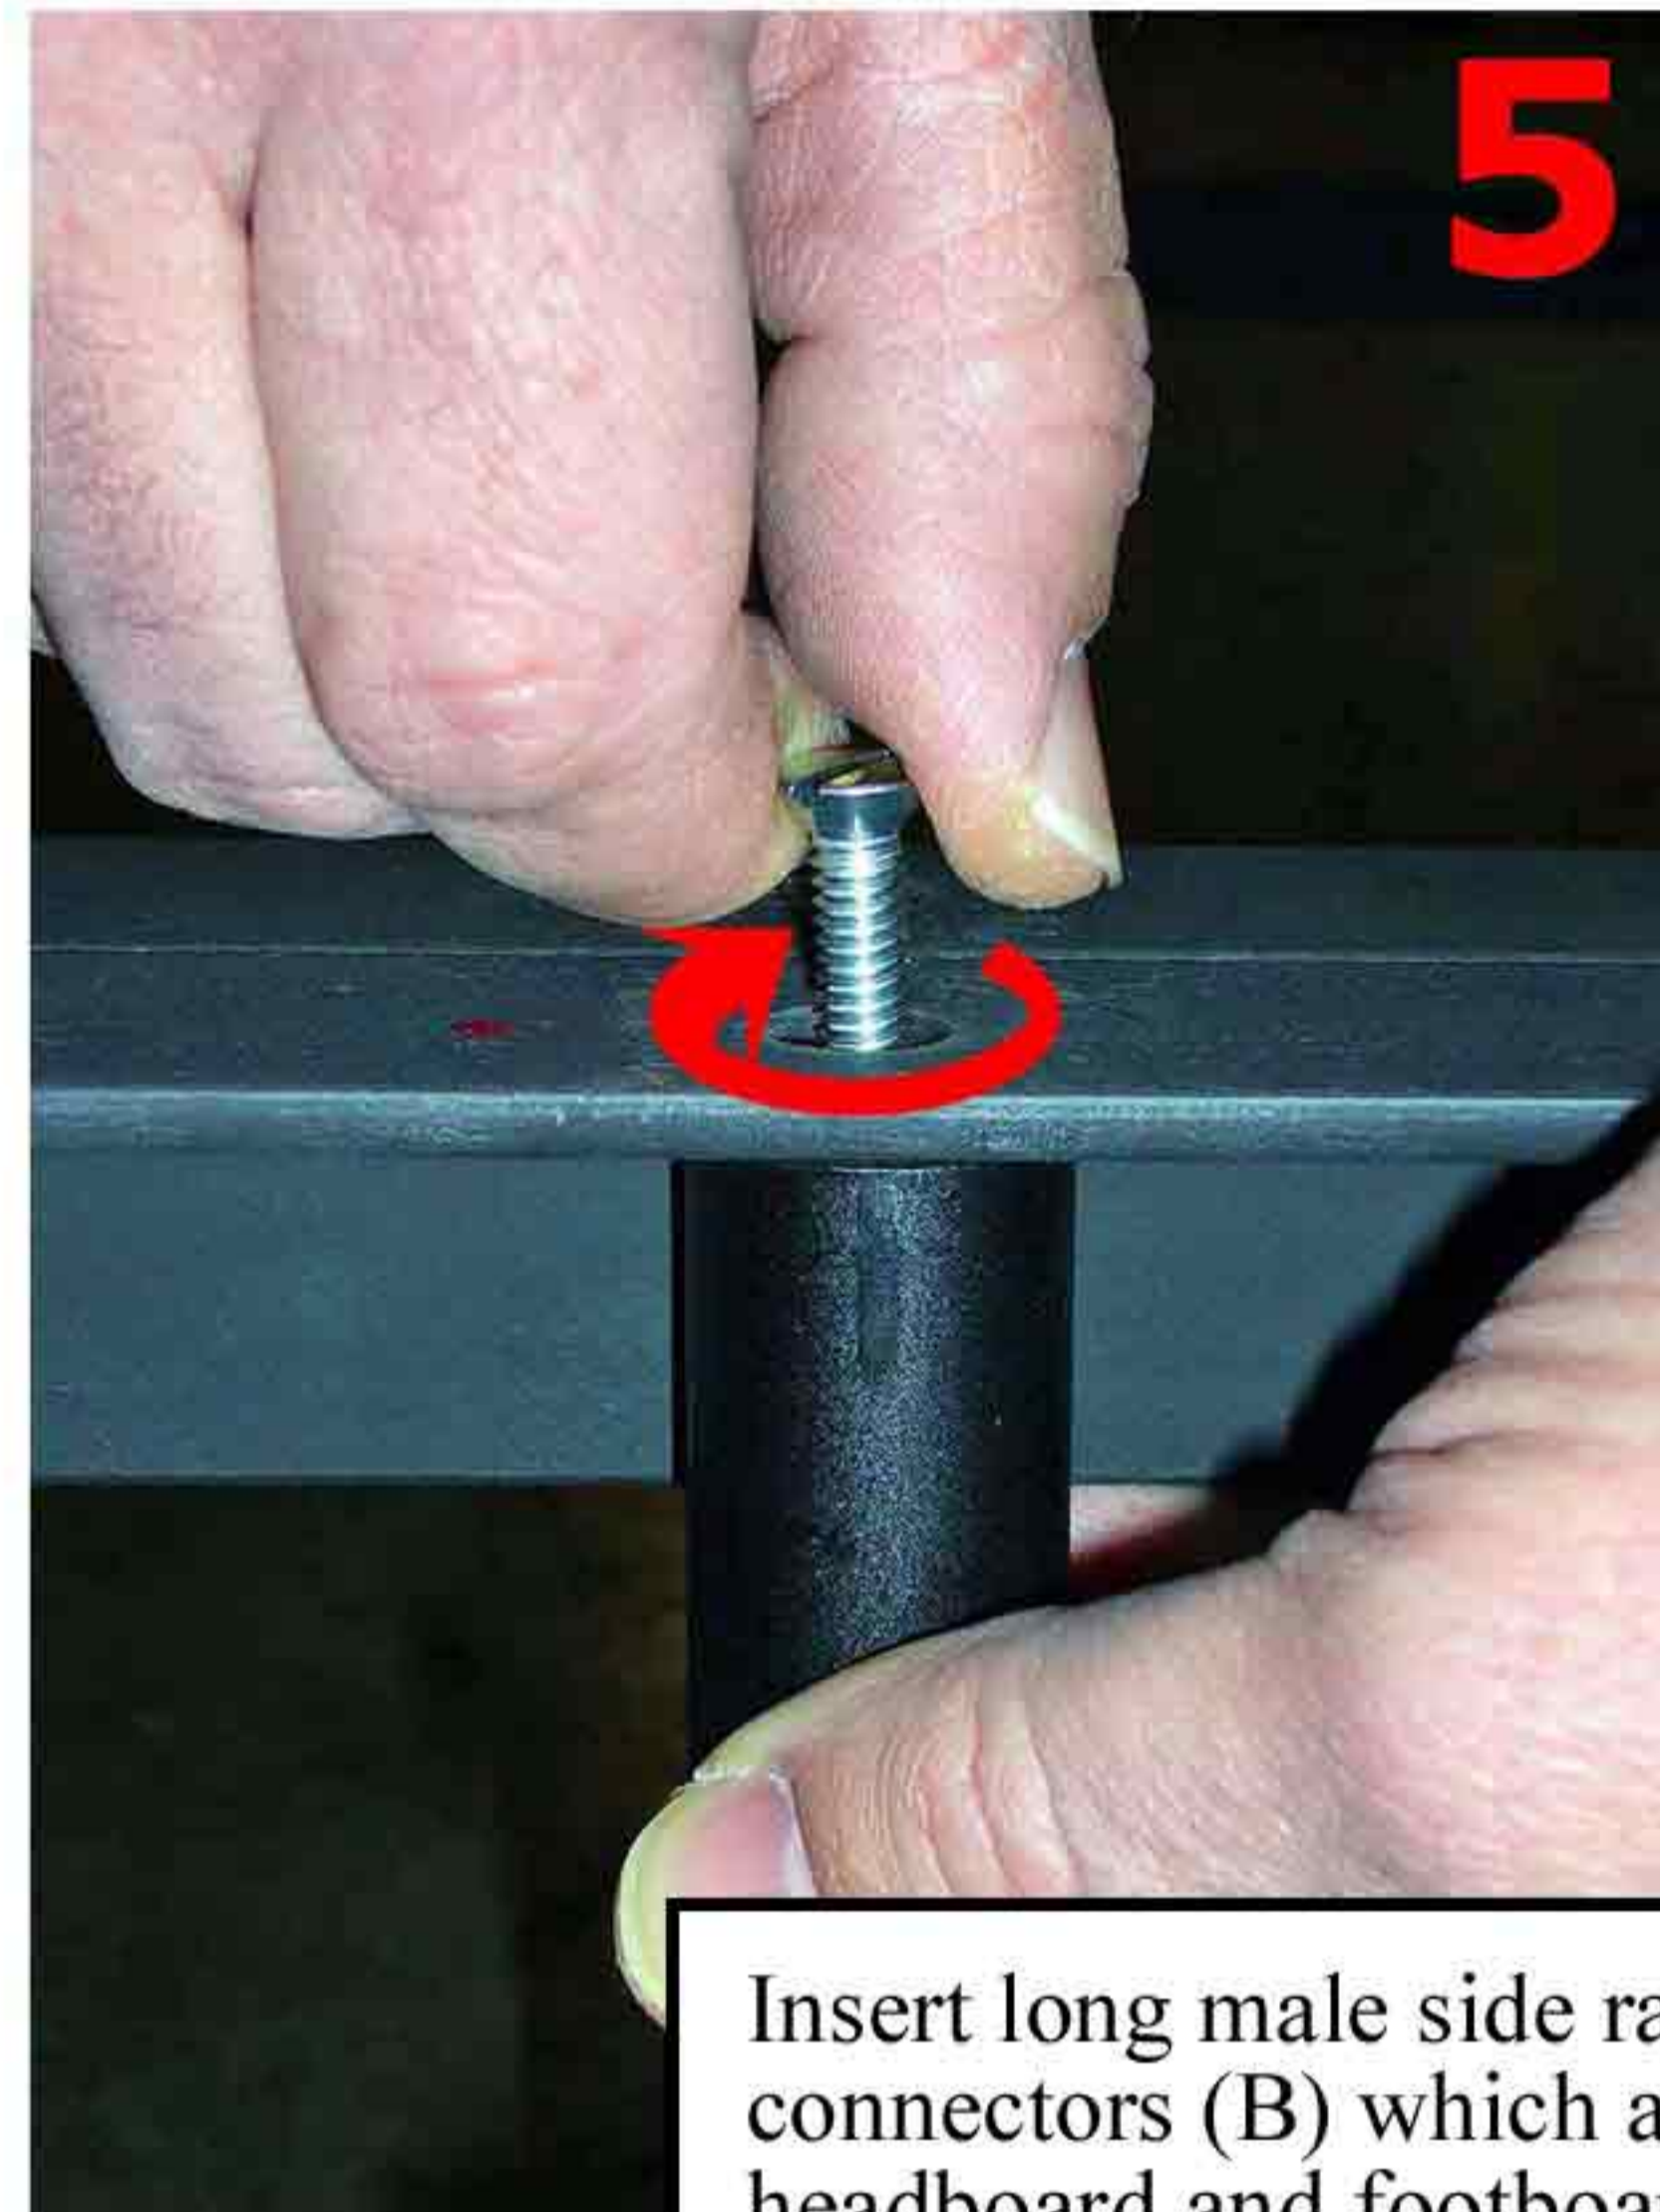


Brass Beds of Virginia-Assembly Instructions

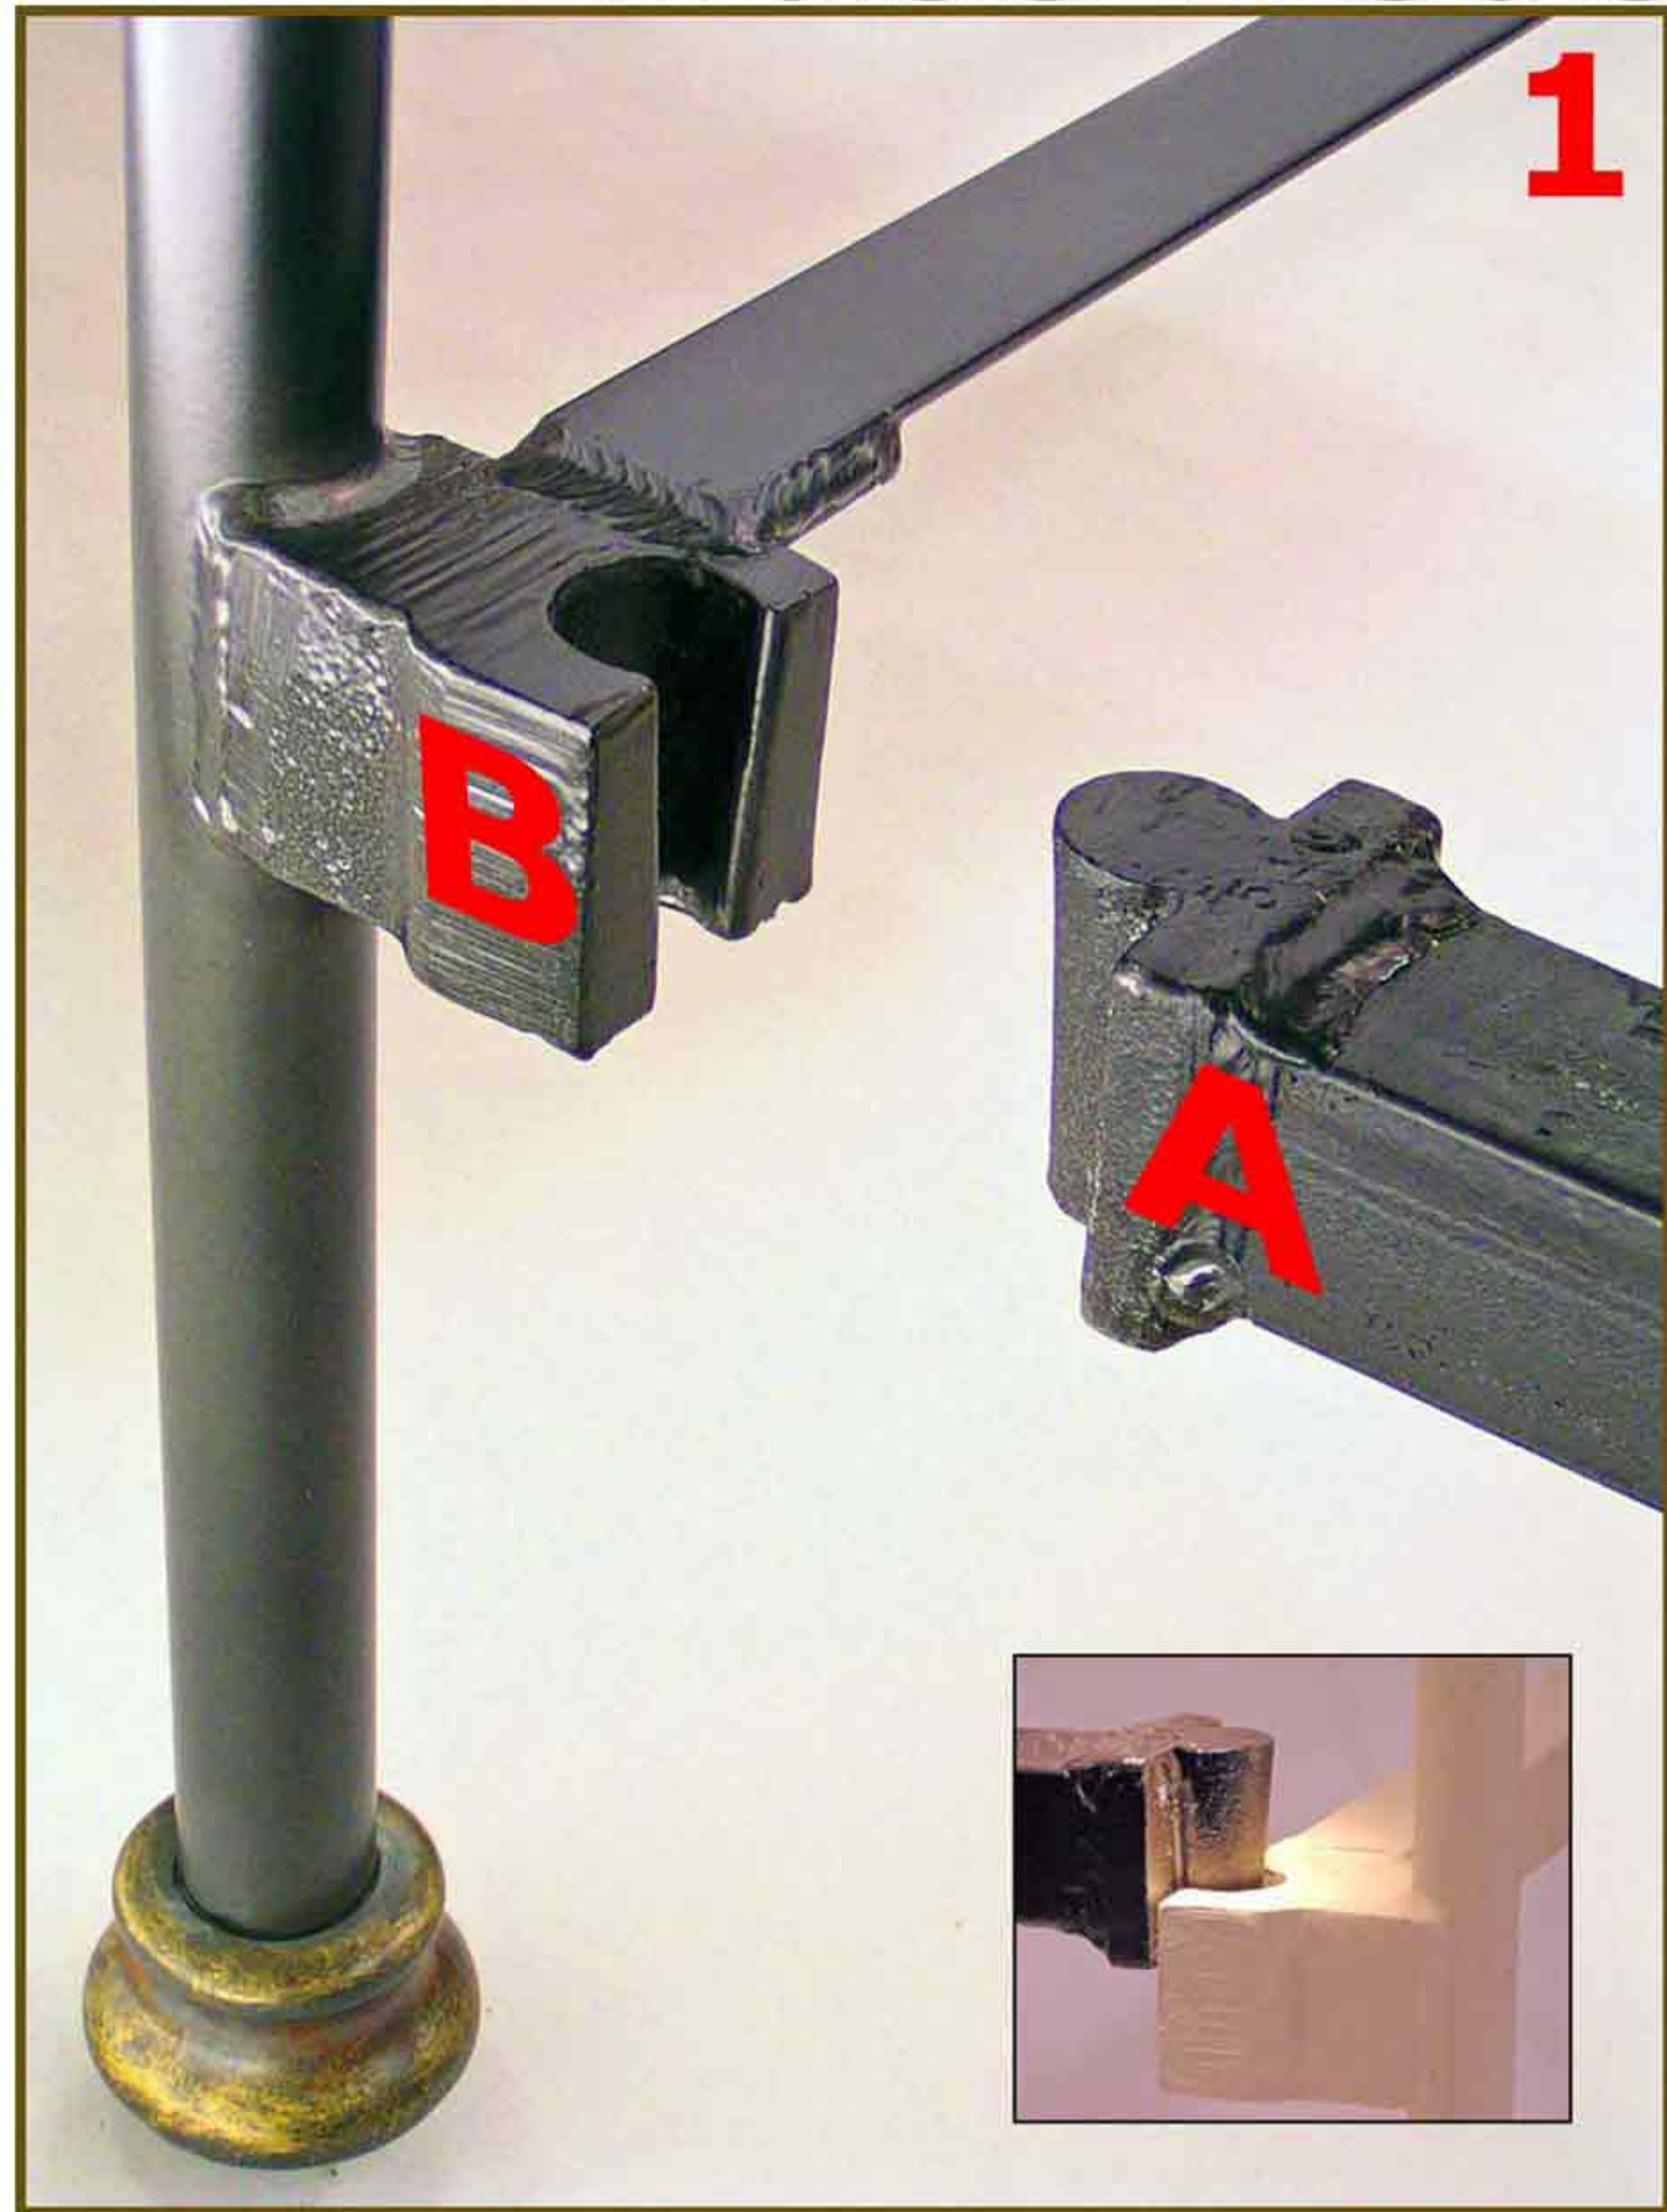



Insert long male side rails (A) into female connectors (B) which are attached to bed headboard and footboard.

Match color code on each rail to color code on headboard.

After both rails are in place, lock by striking male connectors (A) with a hammer. Since the castings are handmade, rails may not necessarily fit flush-just tap until rails are tight.

Place slats on rails as indicated.

Attach extra support legs as indicated.

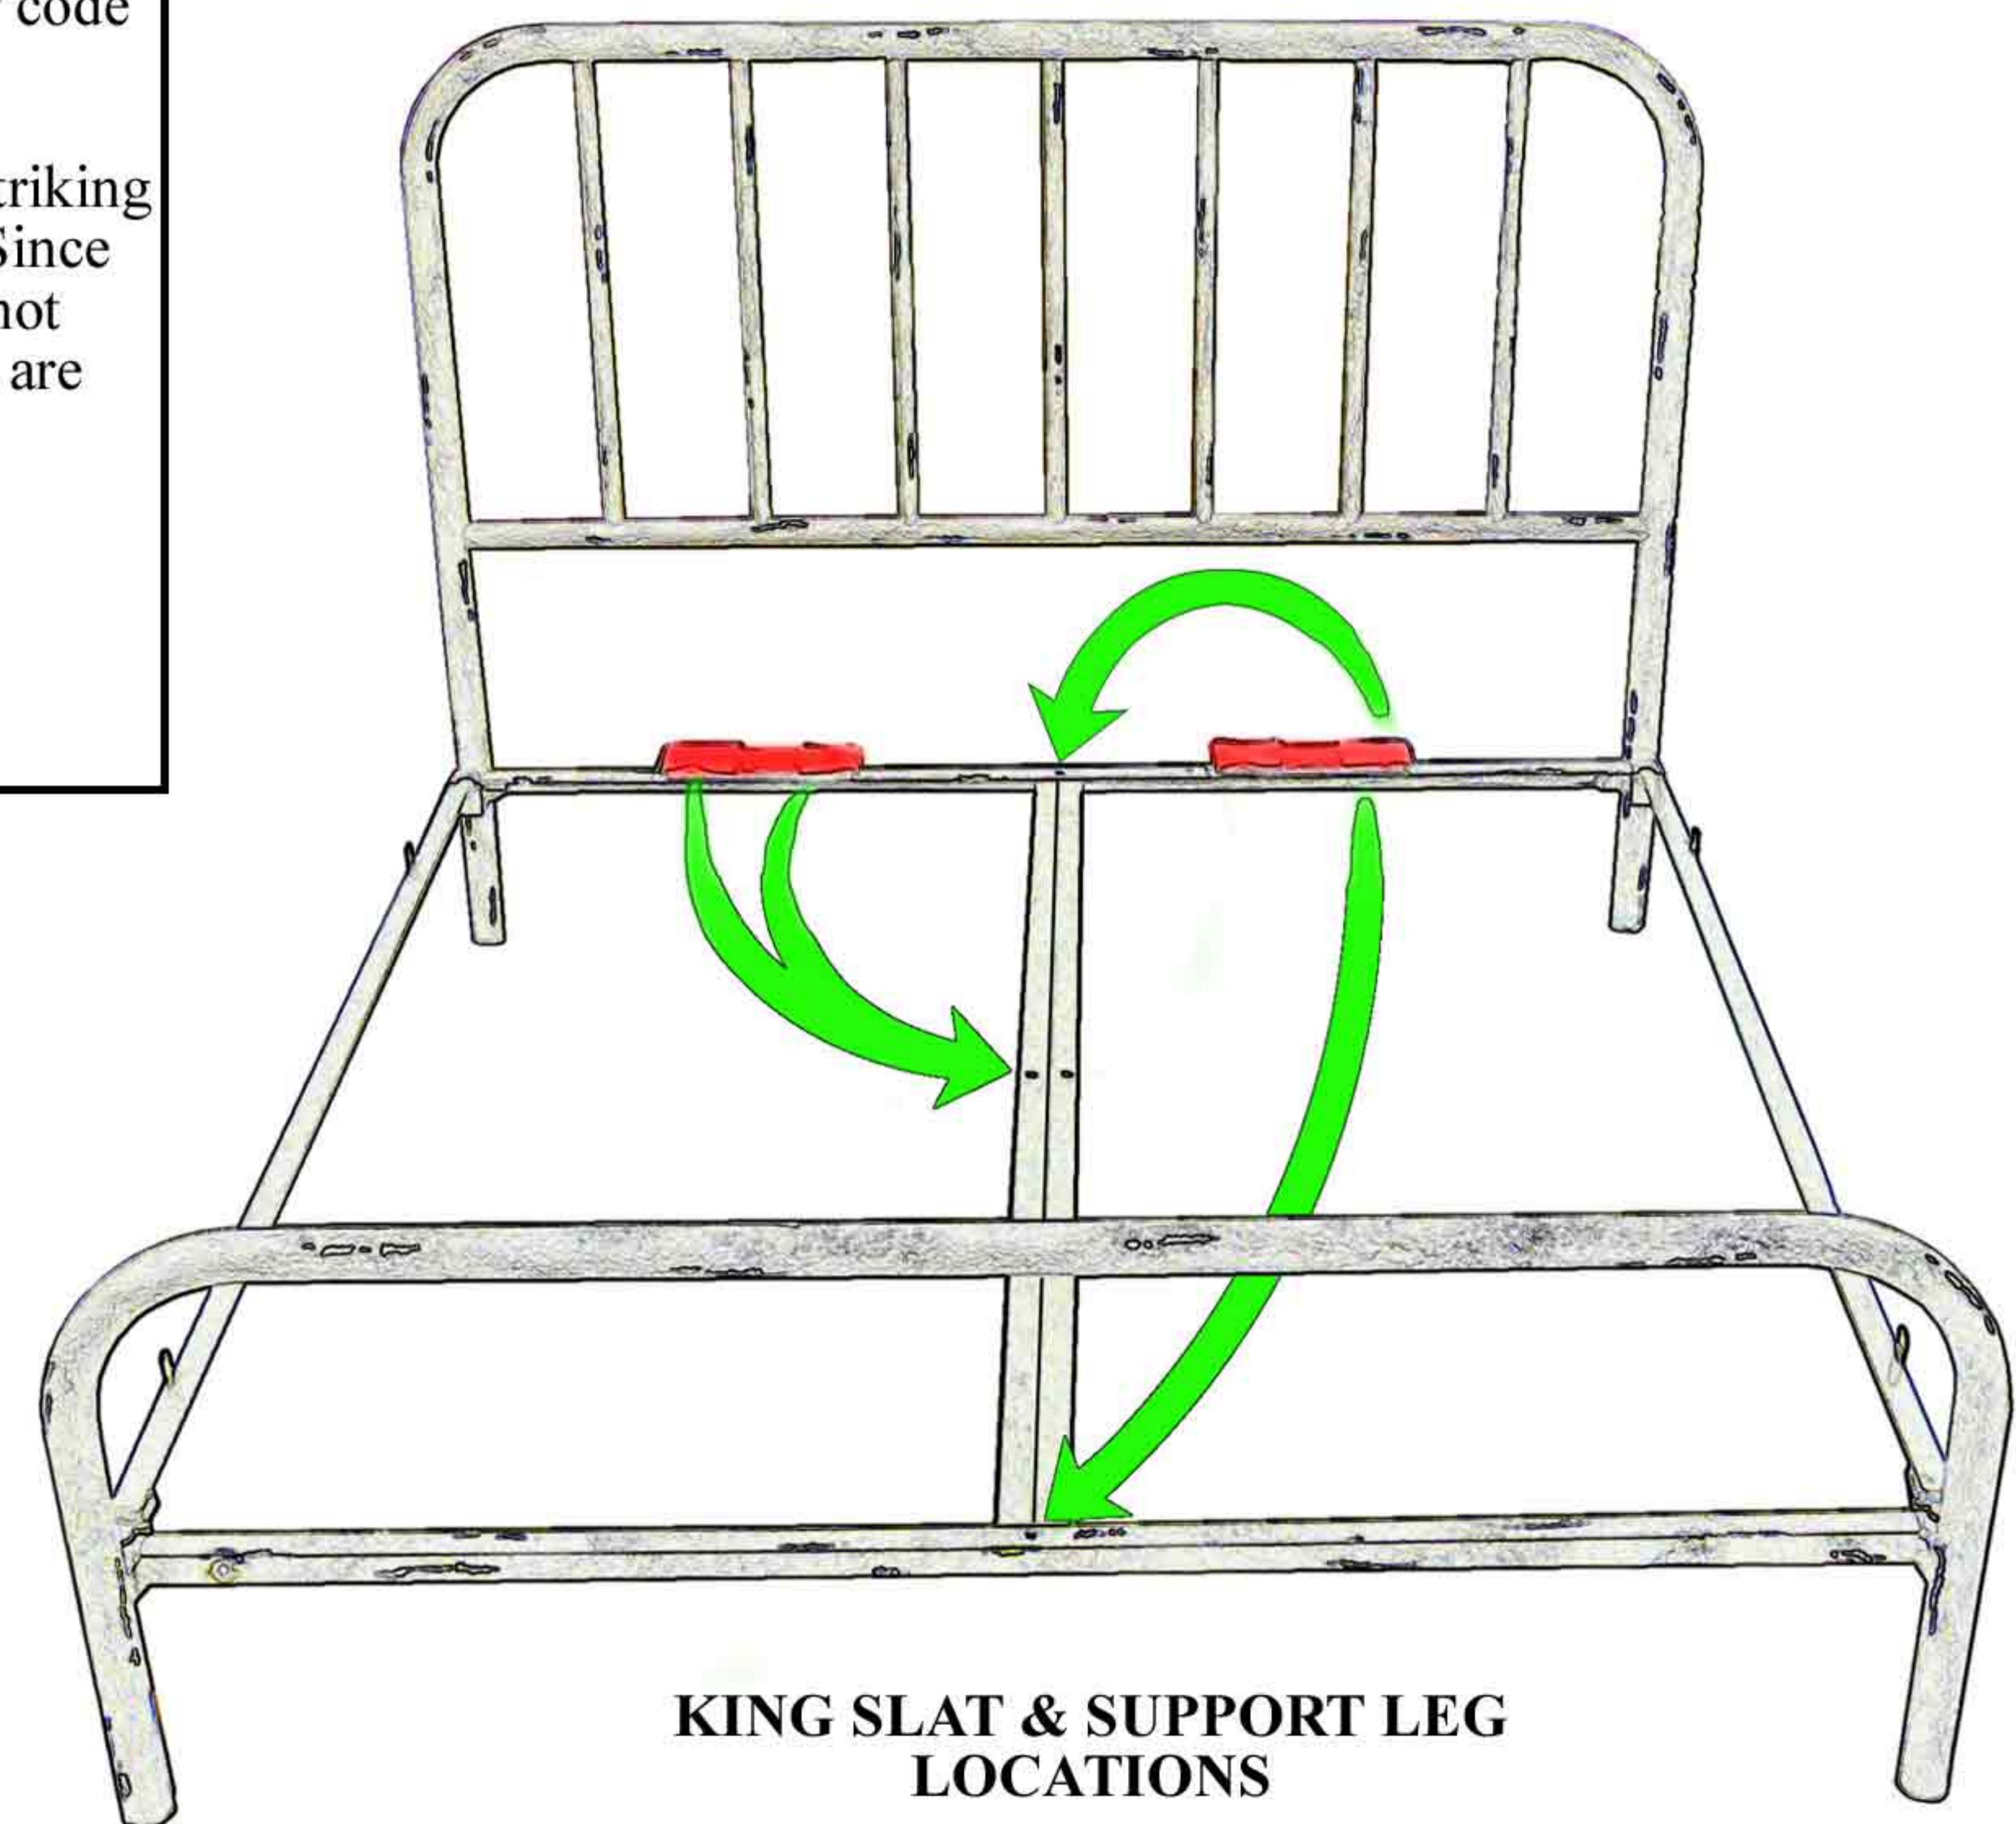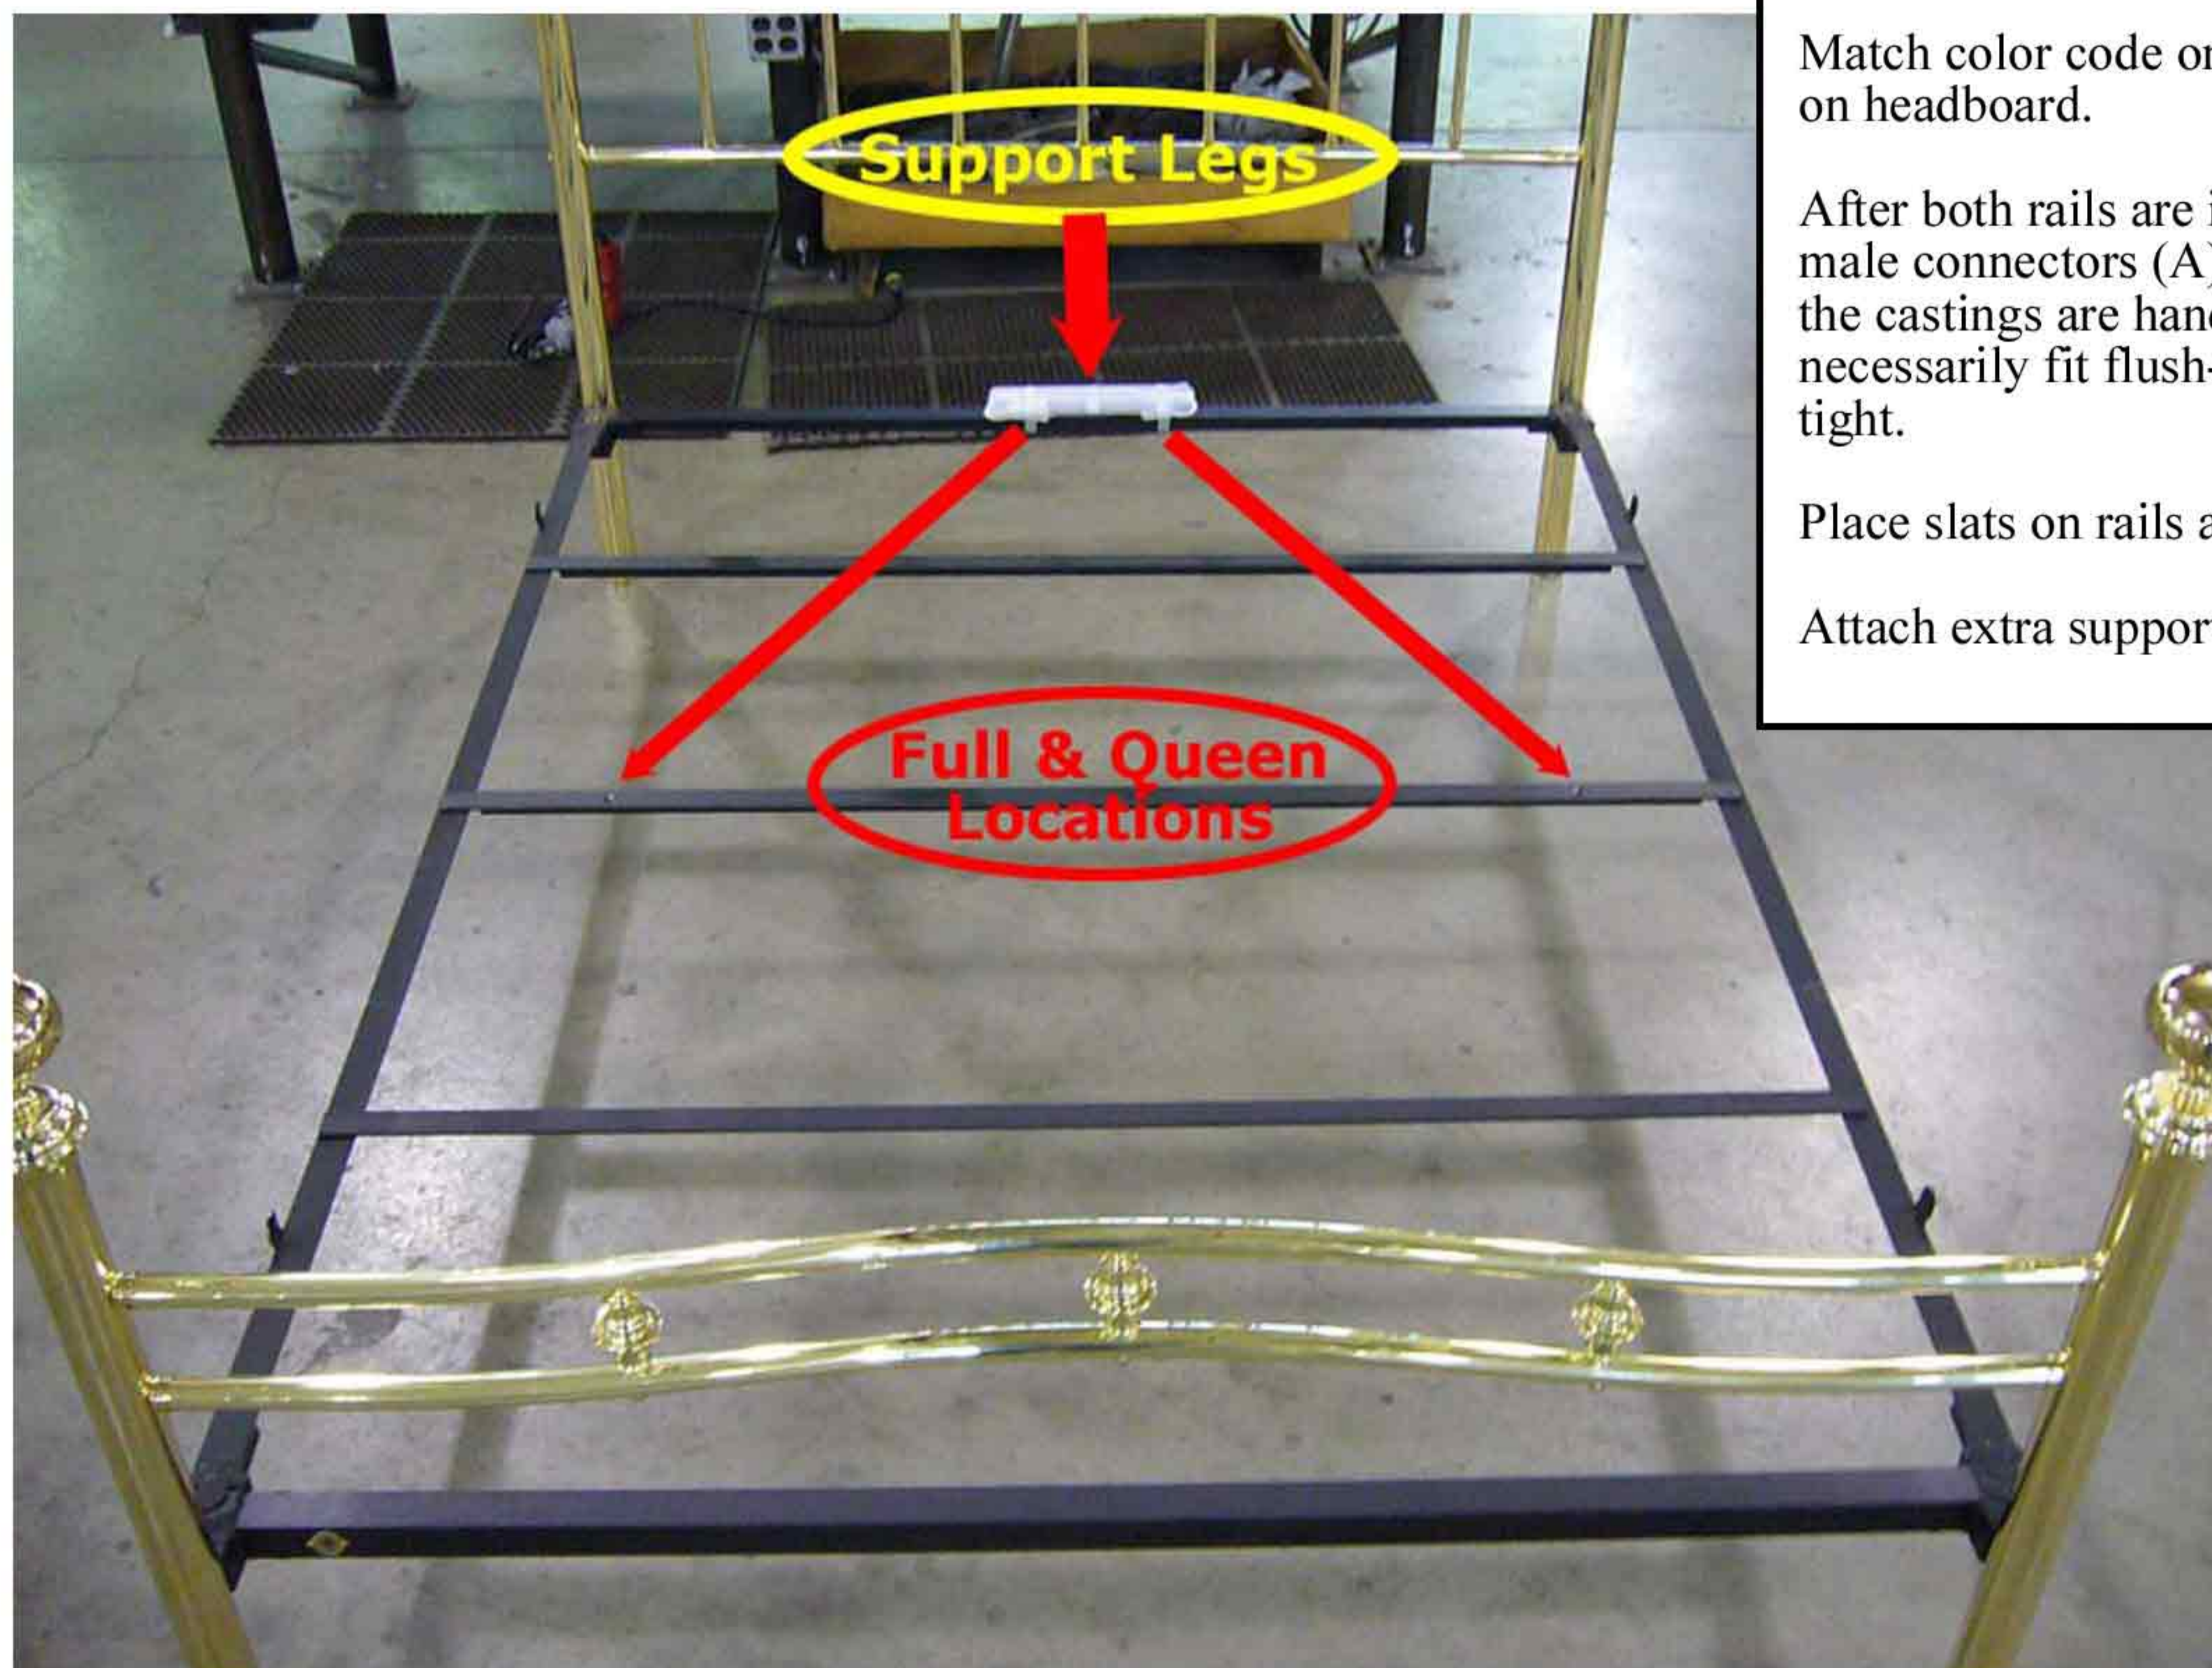

KING SLAT & SUPPORT LEG LOCATIONS